


„The Idea:“

- ★ We establish, for example, following conditions


★ gauge :  **90 mm**

max. width of the wagon




max. length of the wagon

coupling and buffer


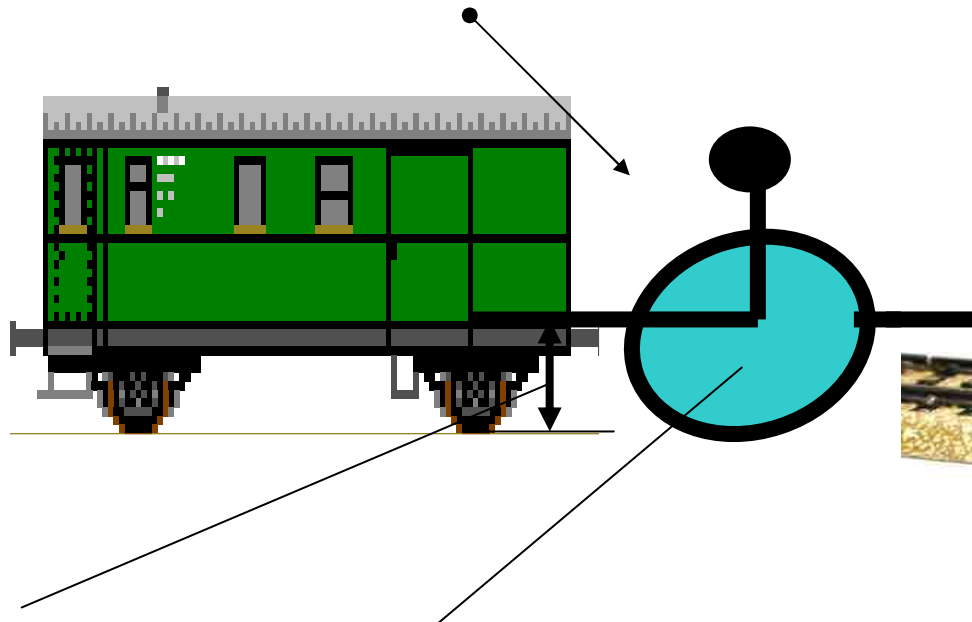


height and type must be defined!

coupling measures (mm)

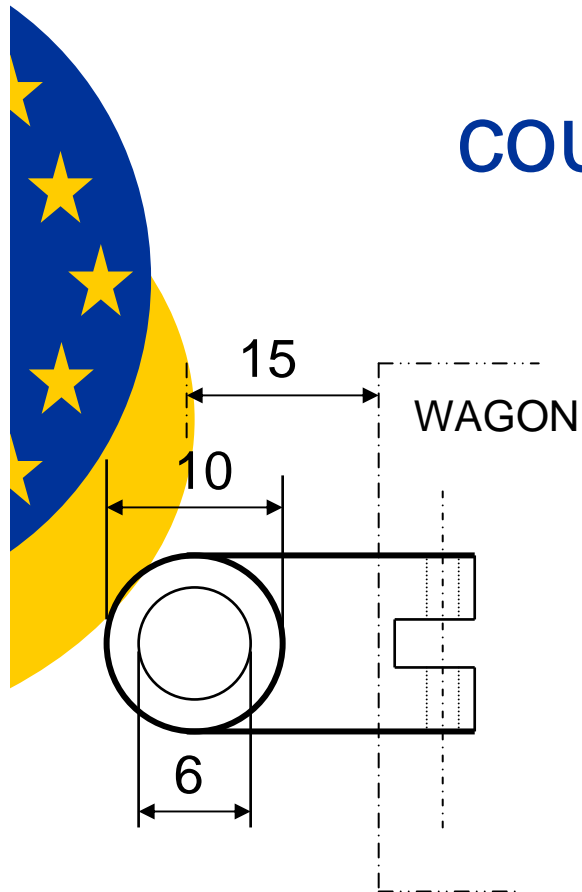

loop moveable!!!

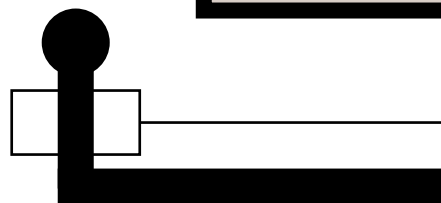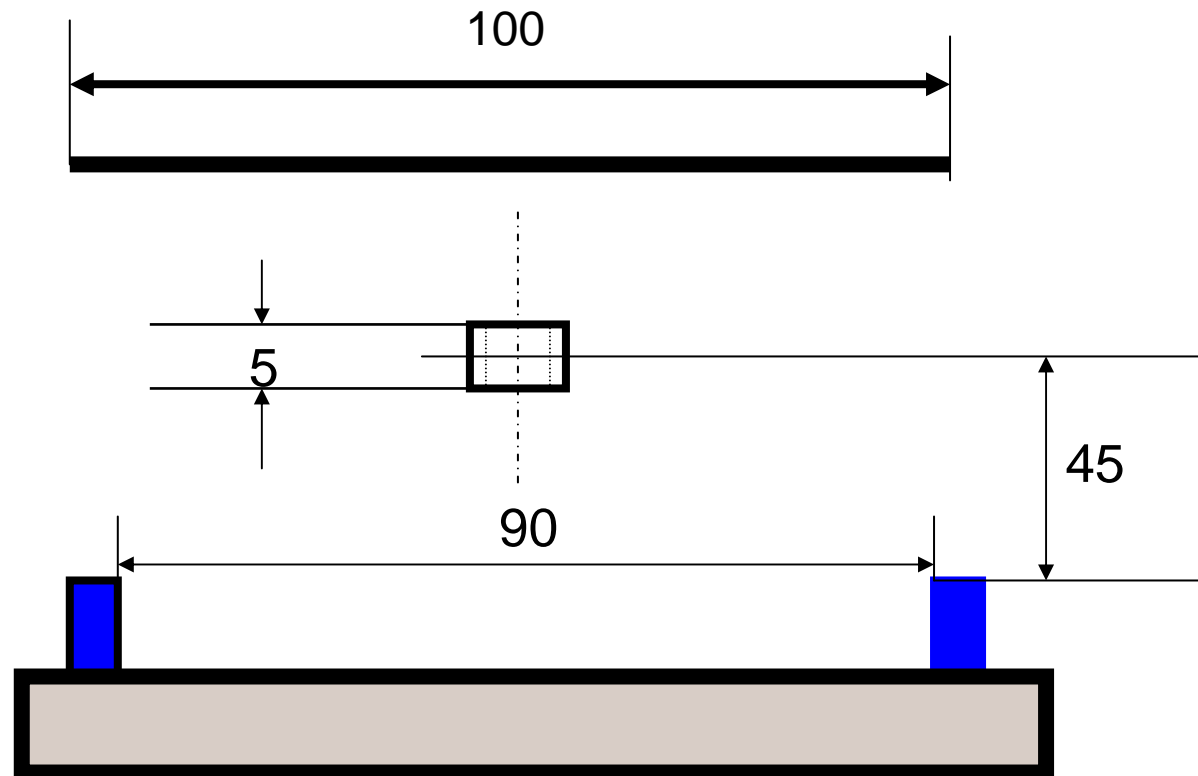


Take to account:
measure 45 mm

hook fixed!!!


wheel and buffer measures

in mm

wheel \varnothing

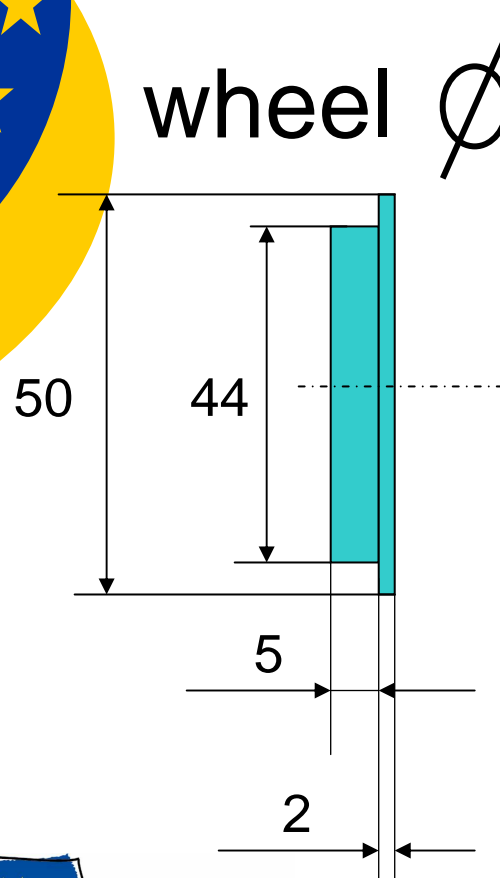

buffers

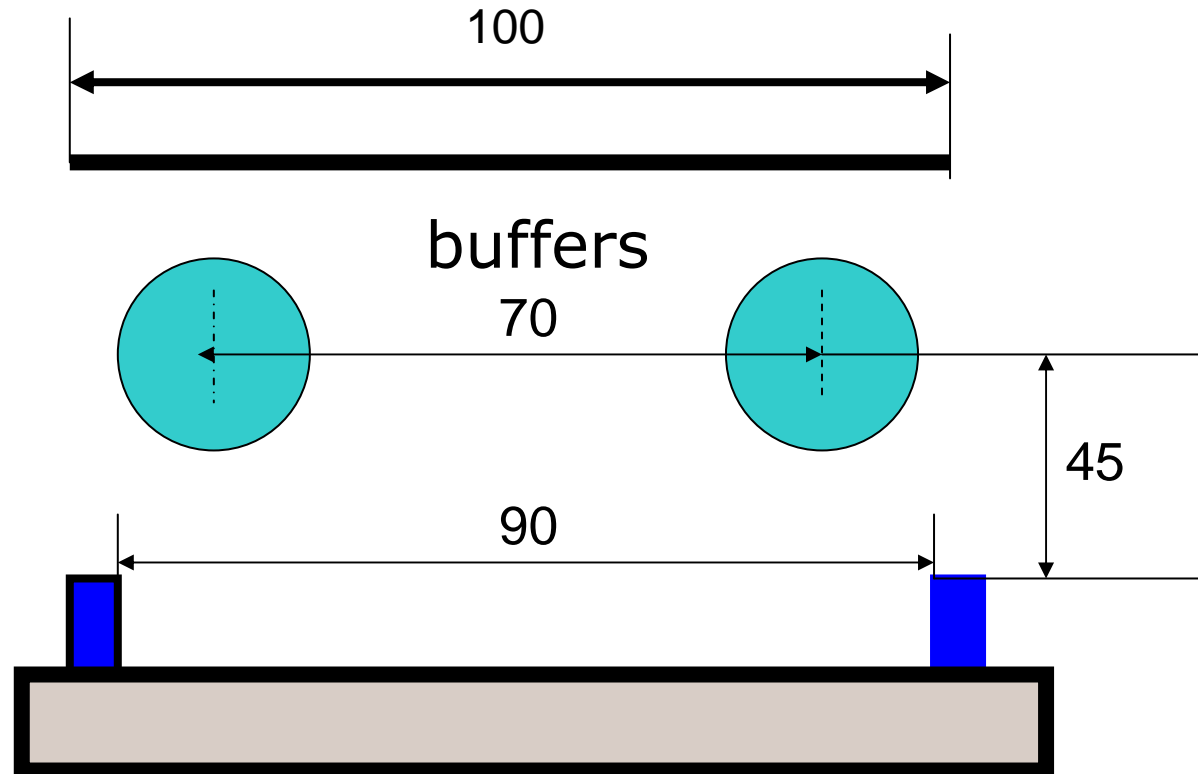

These measures must be kept exactly!



- Wagon-example-draft

Partners &
BBS T-G-H-S
Bad Kreuznach

